

FIG. 1

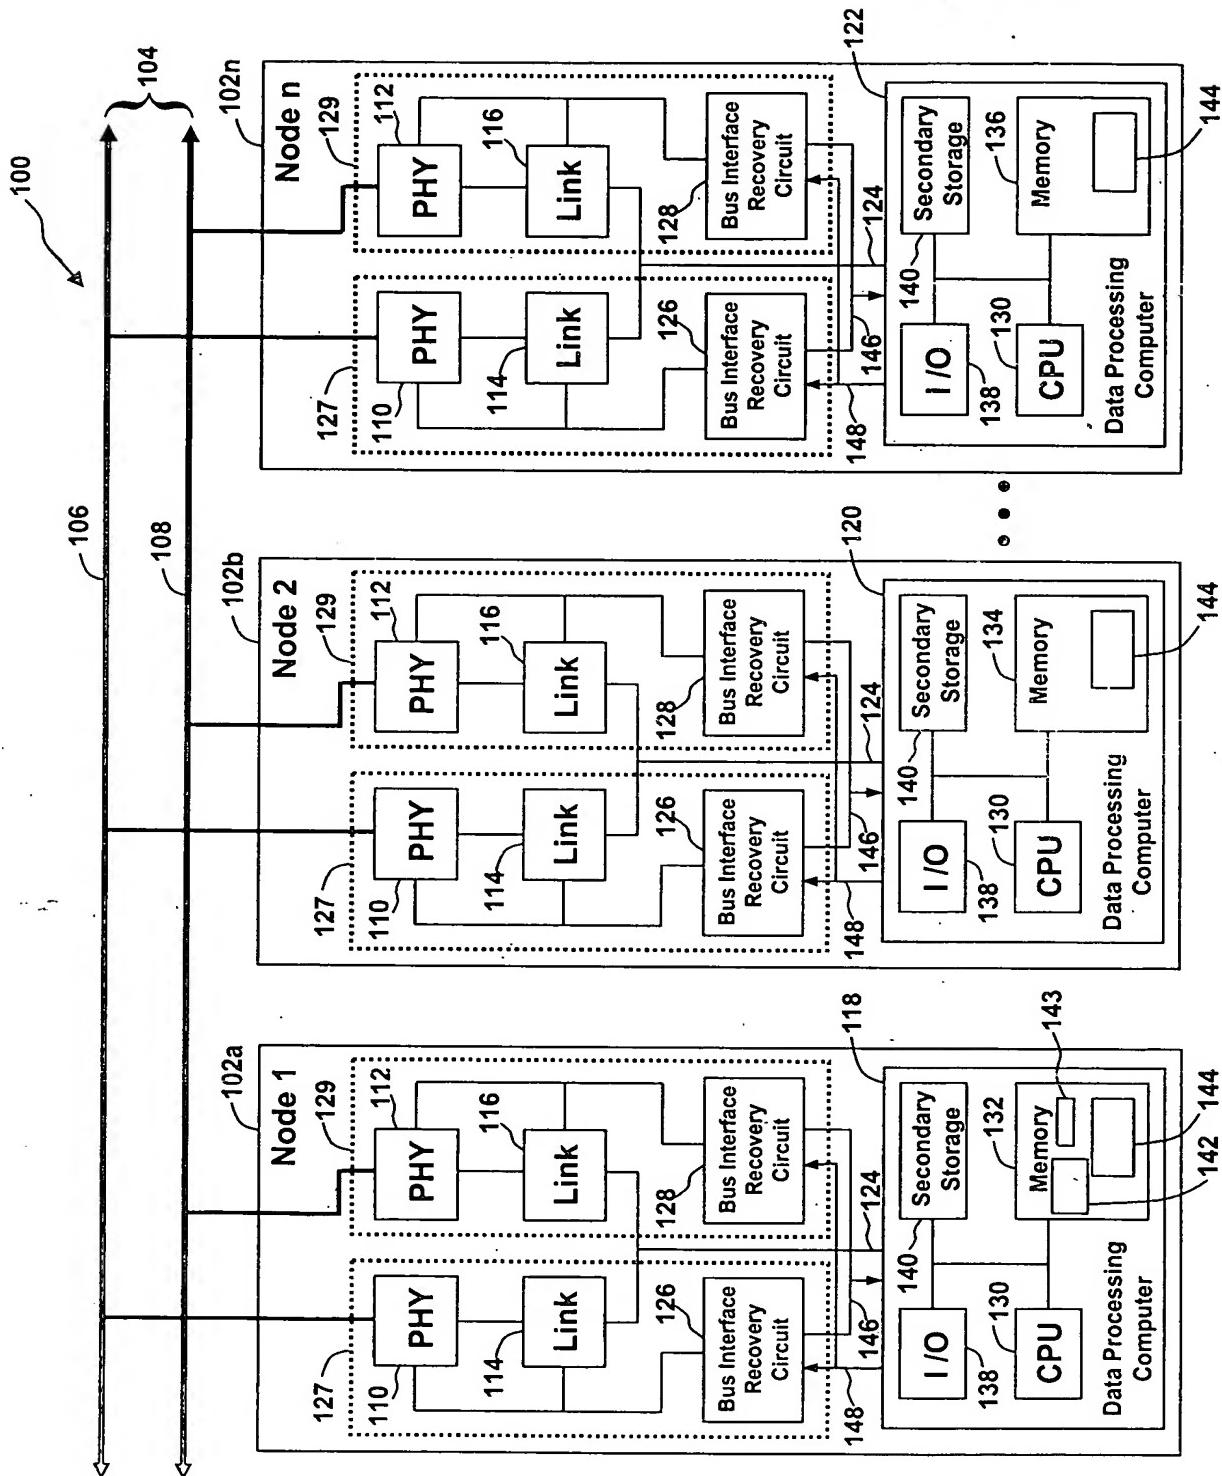


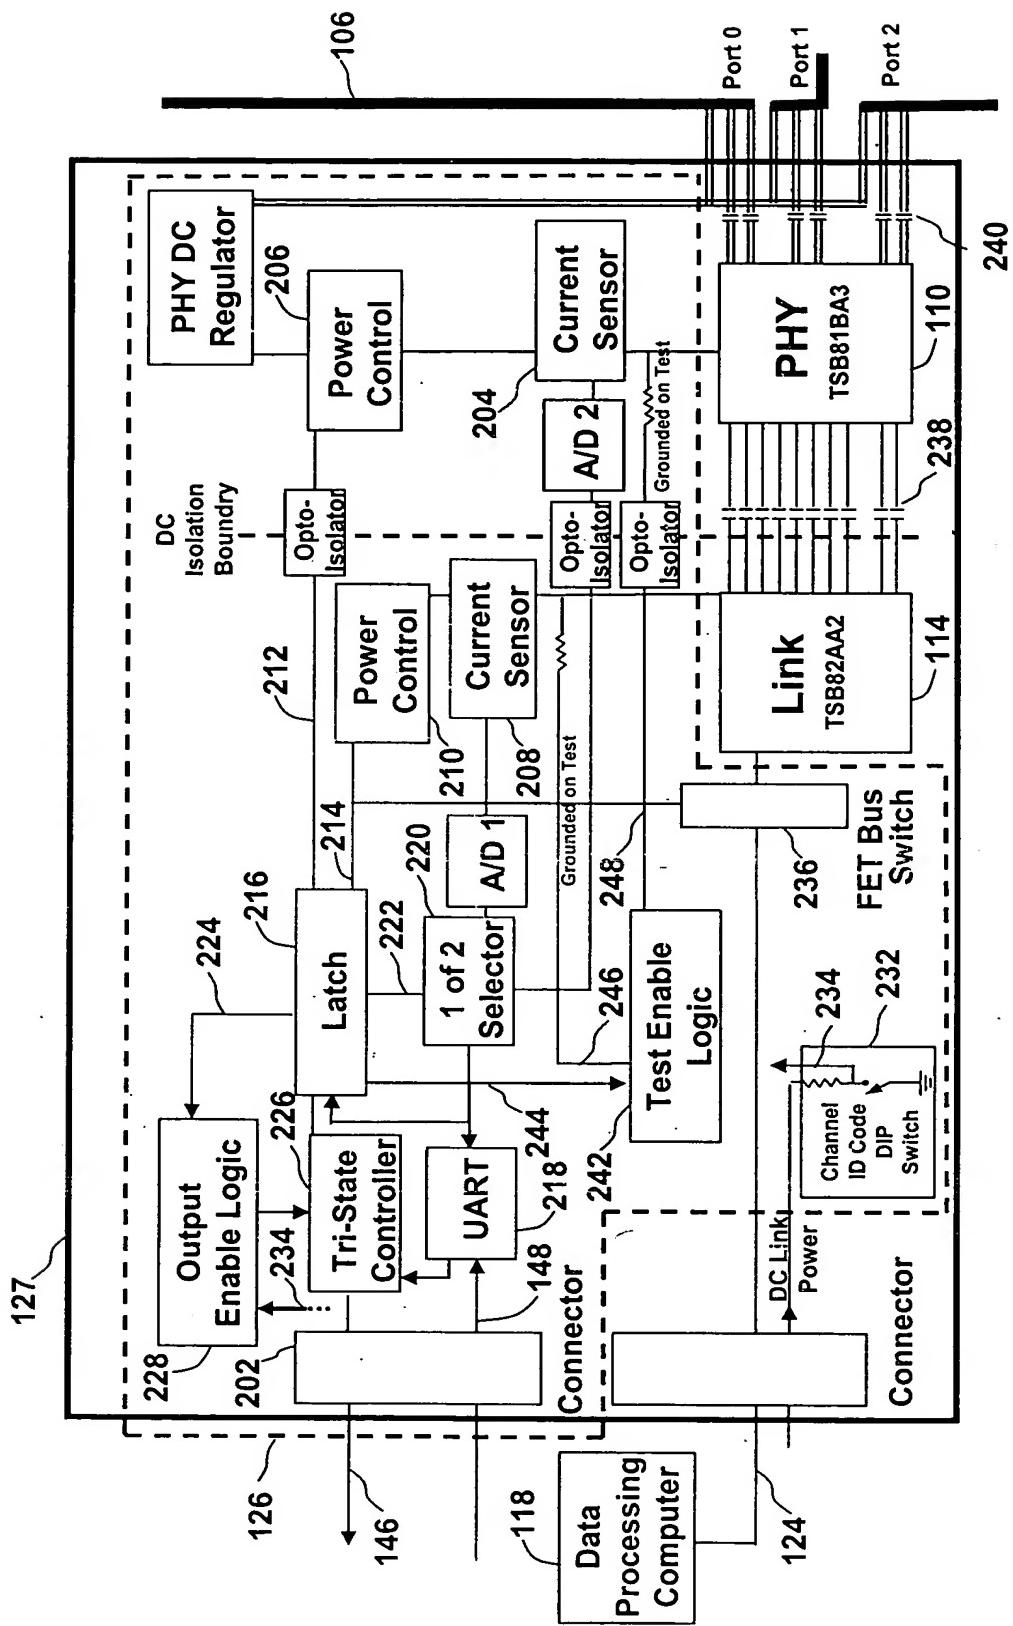
FIG. 2

FIG. 3

<u>Bit No.</u>	
1	1 = Power Down Command, Channel A Link
2	1 = Power Down Command, Channel A PHY
3	1 = Power Down Command, Channel B Link
4	1 = Power Down Command, Channel B PHY
5	1 = Activate Current Surge Test for the Enabled Outgoing UART Source
6	0 = Enable Channel A for Outgoing UART Data, 1 = Enable Channel B
7	0 = Enable Monitoring of Link Current for Outgoing UART Data, 1 = Enable PHY Current Monitoring
8	Reserved - Set to 0 in Control Latch

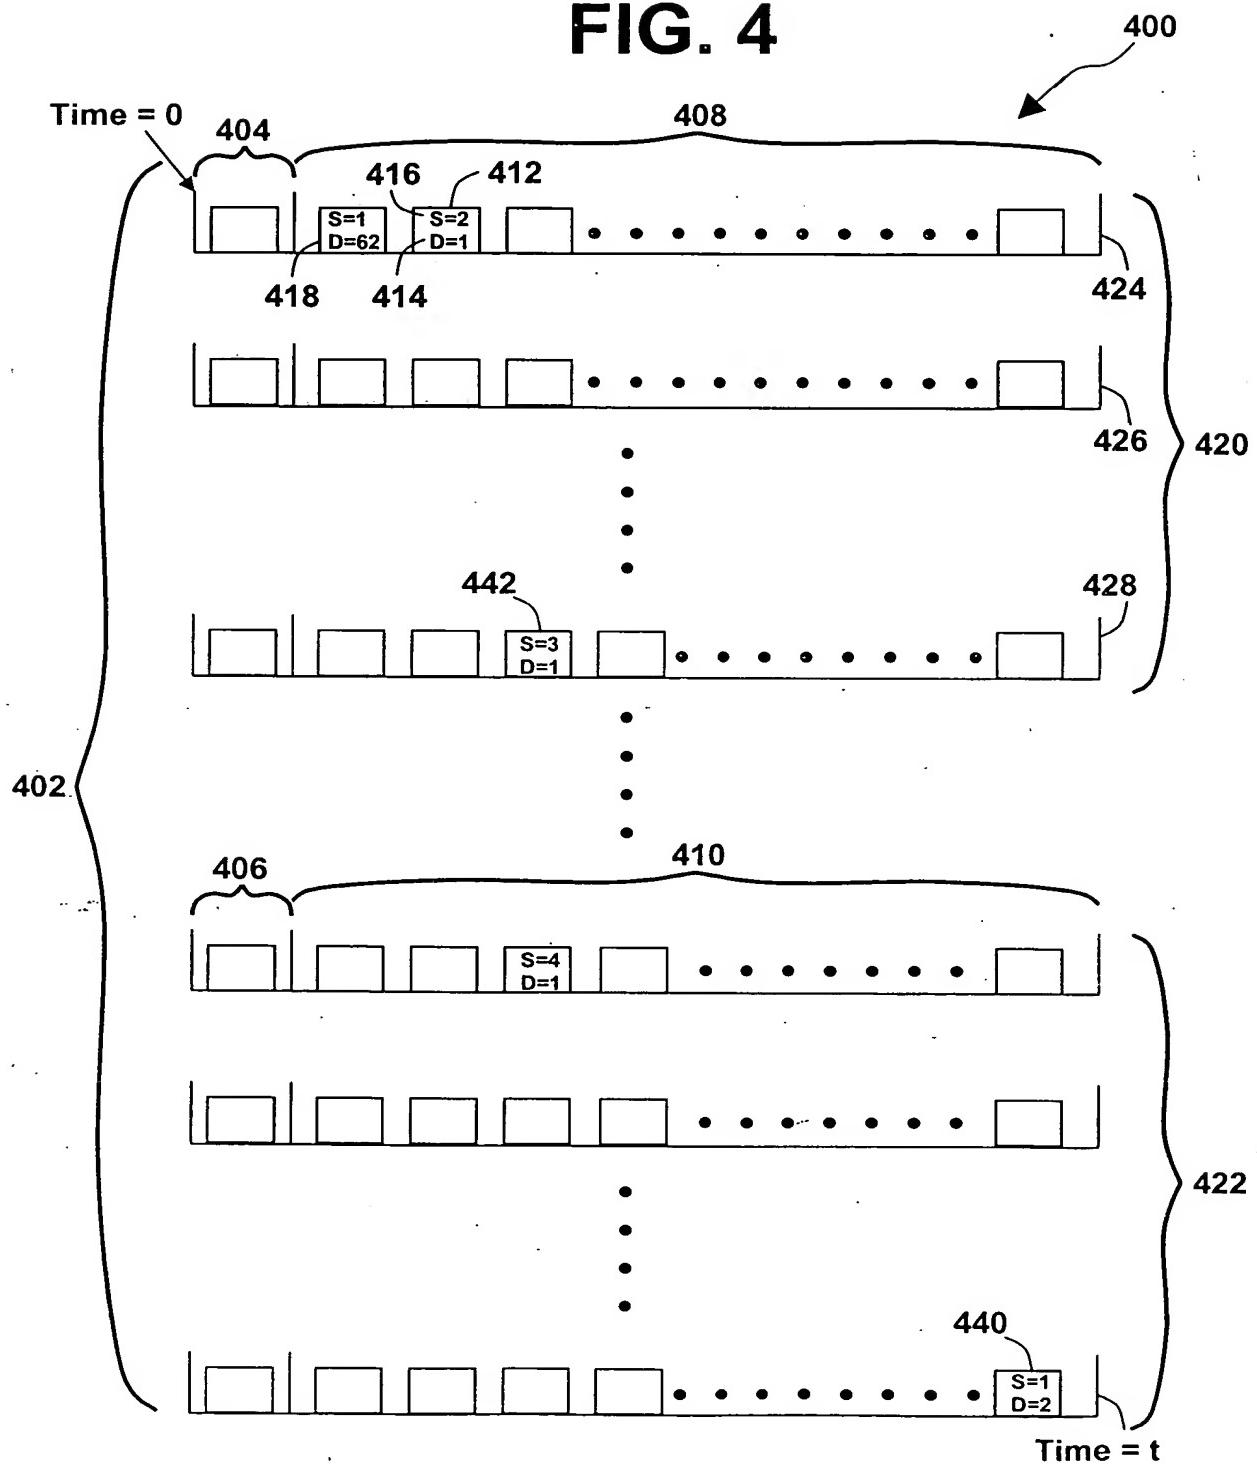
FIG. 4

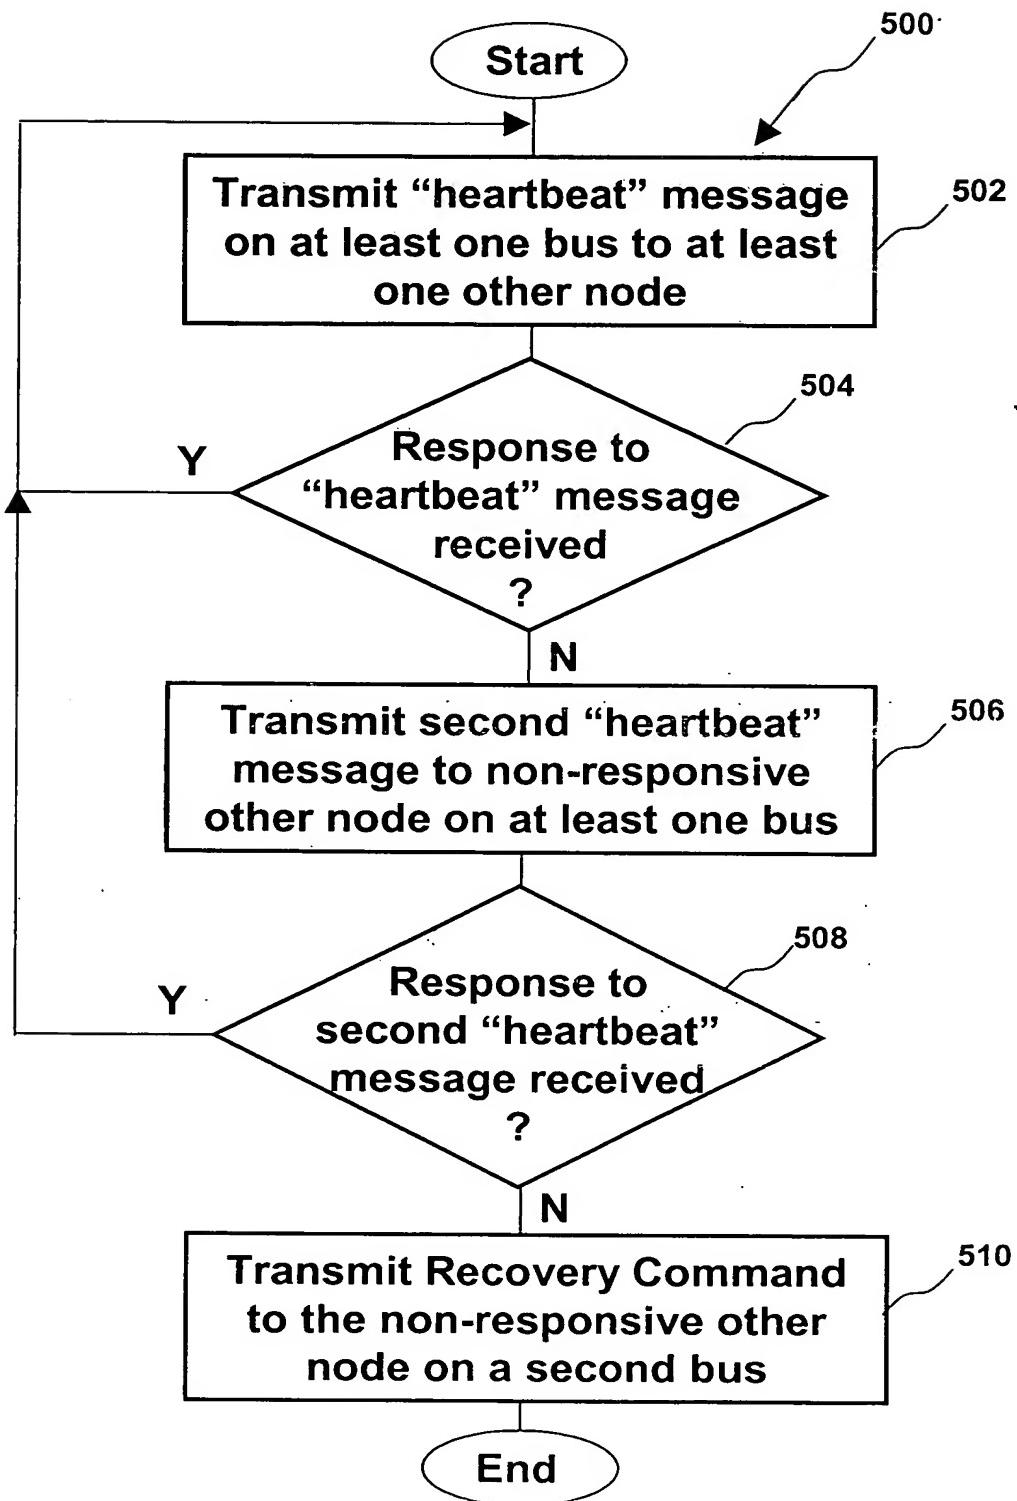
FIG. 5

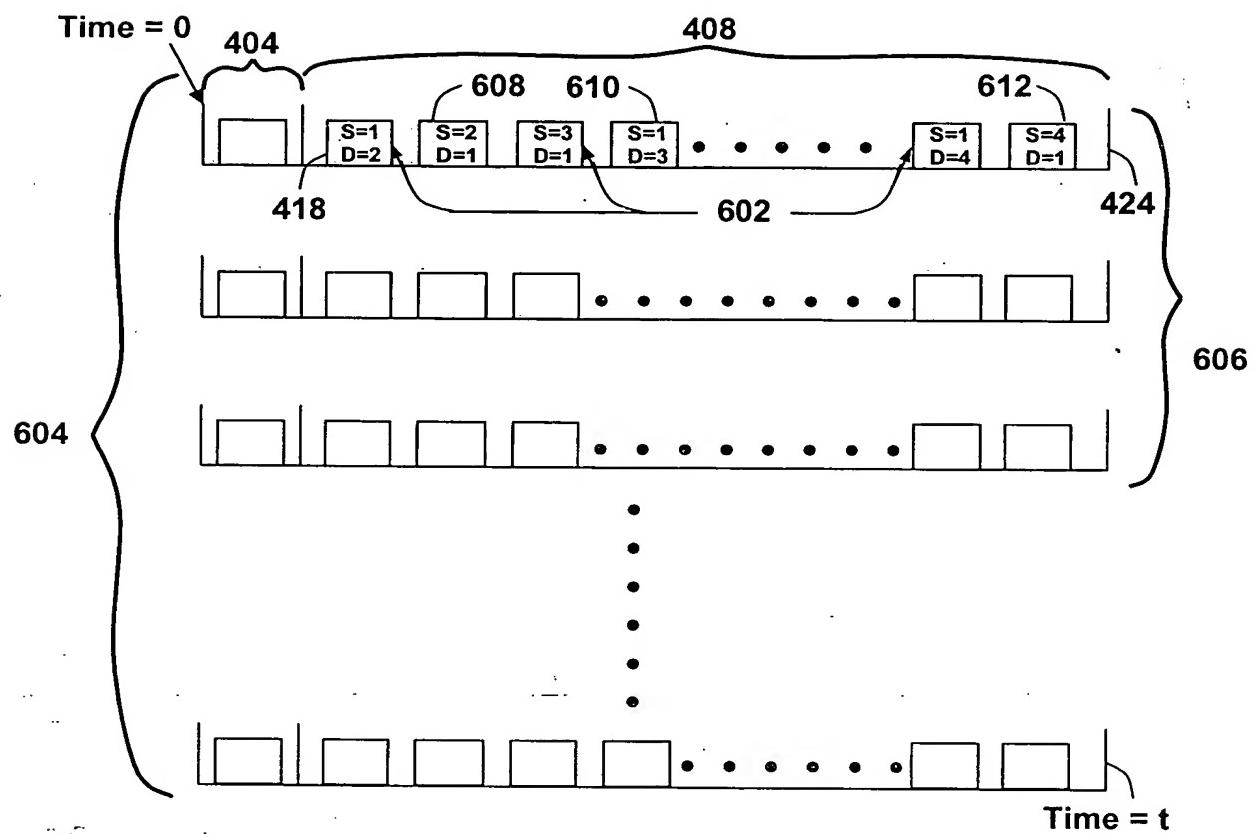
FIG. 6

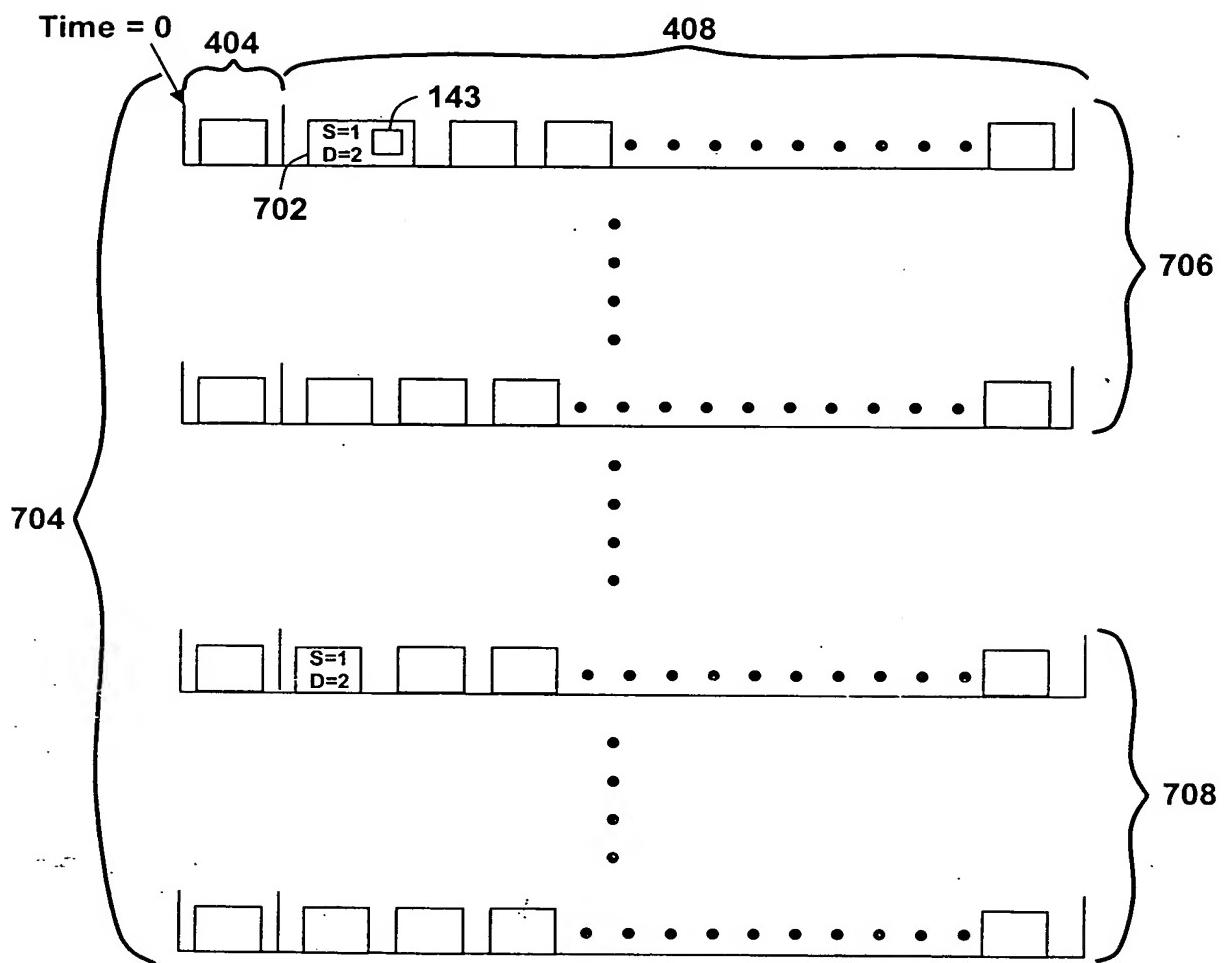
FIG. 7

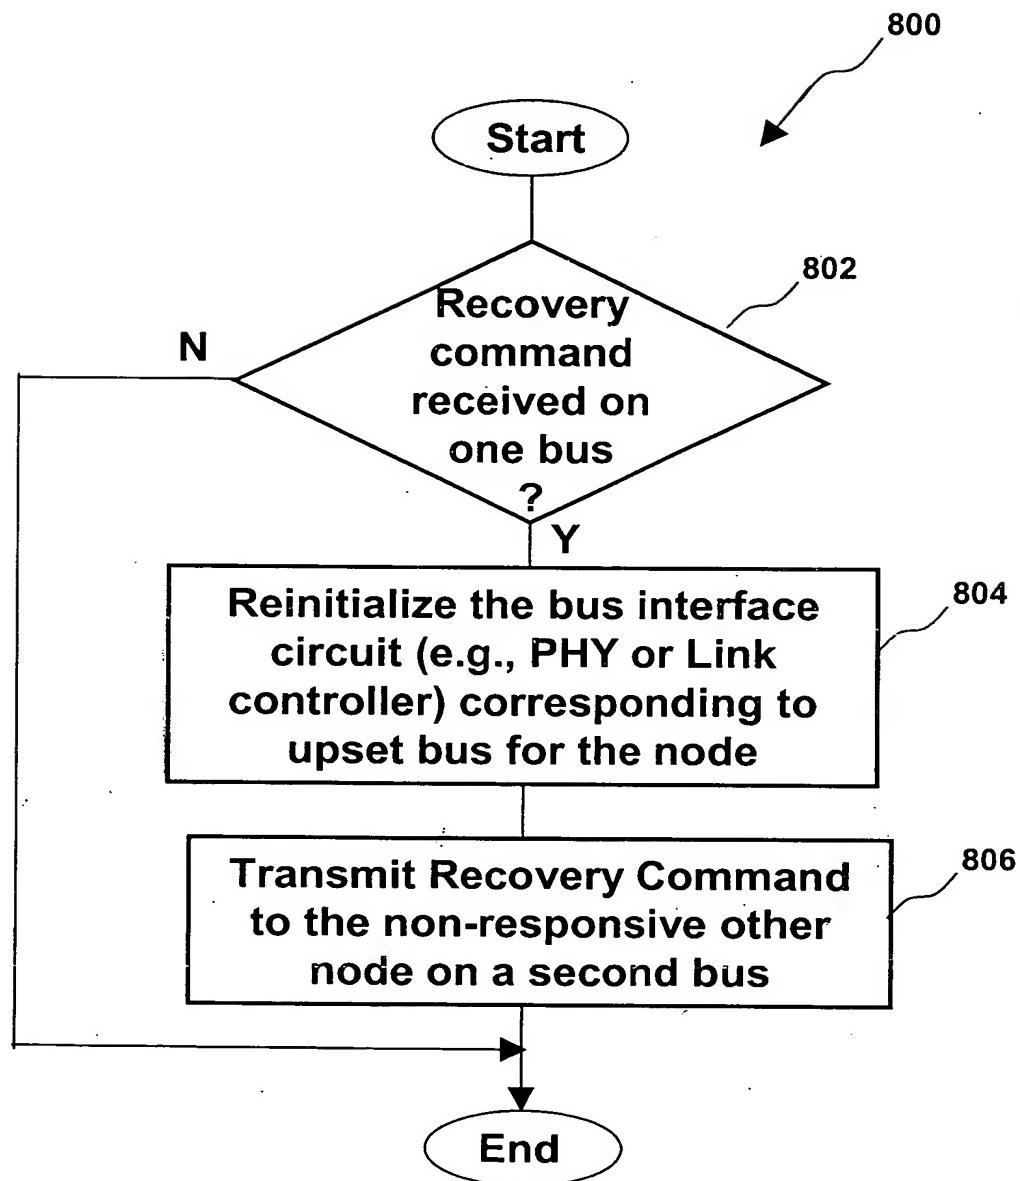
FIG. 8

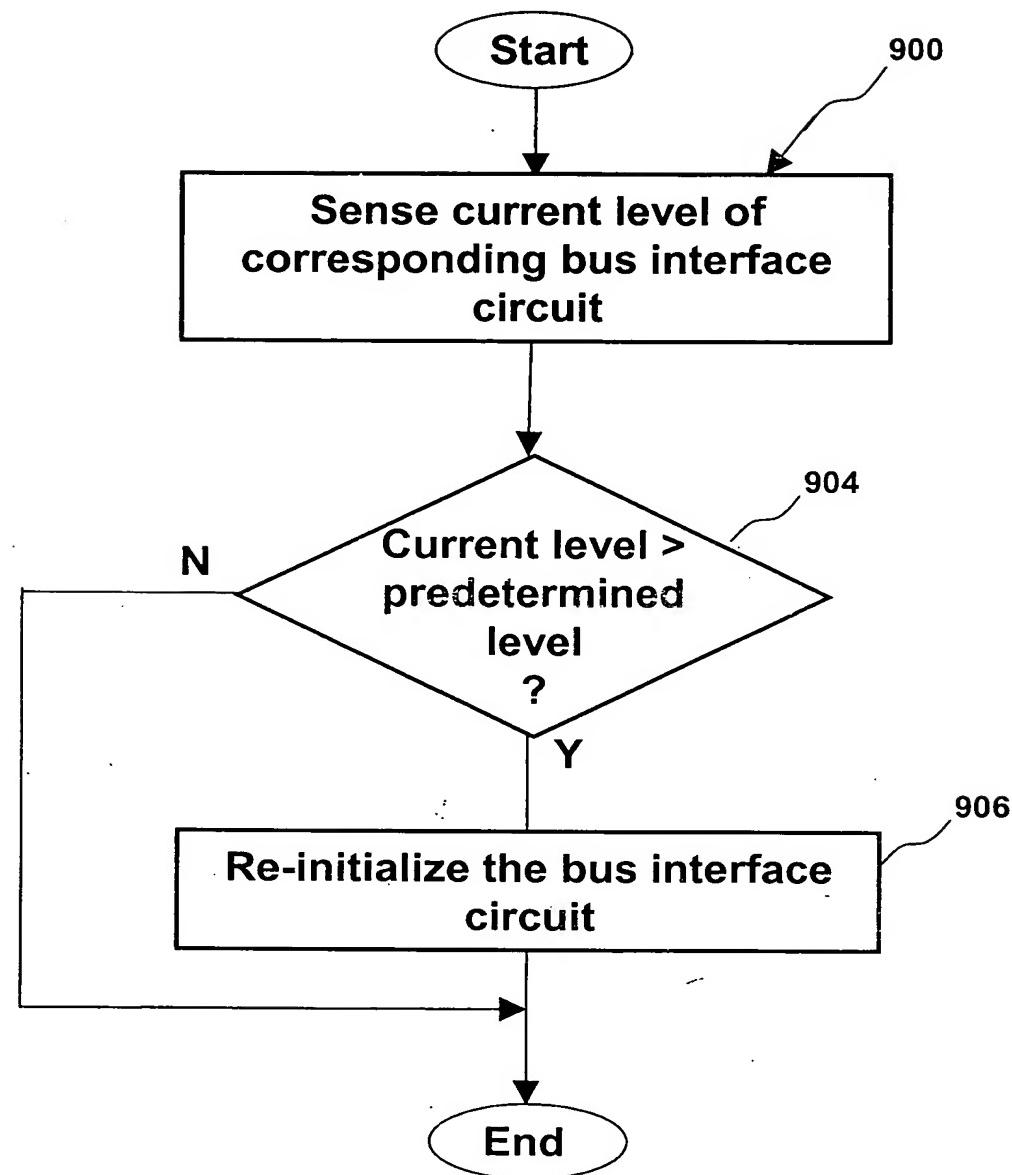
FIG. 9

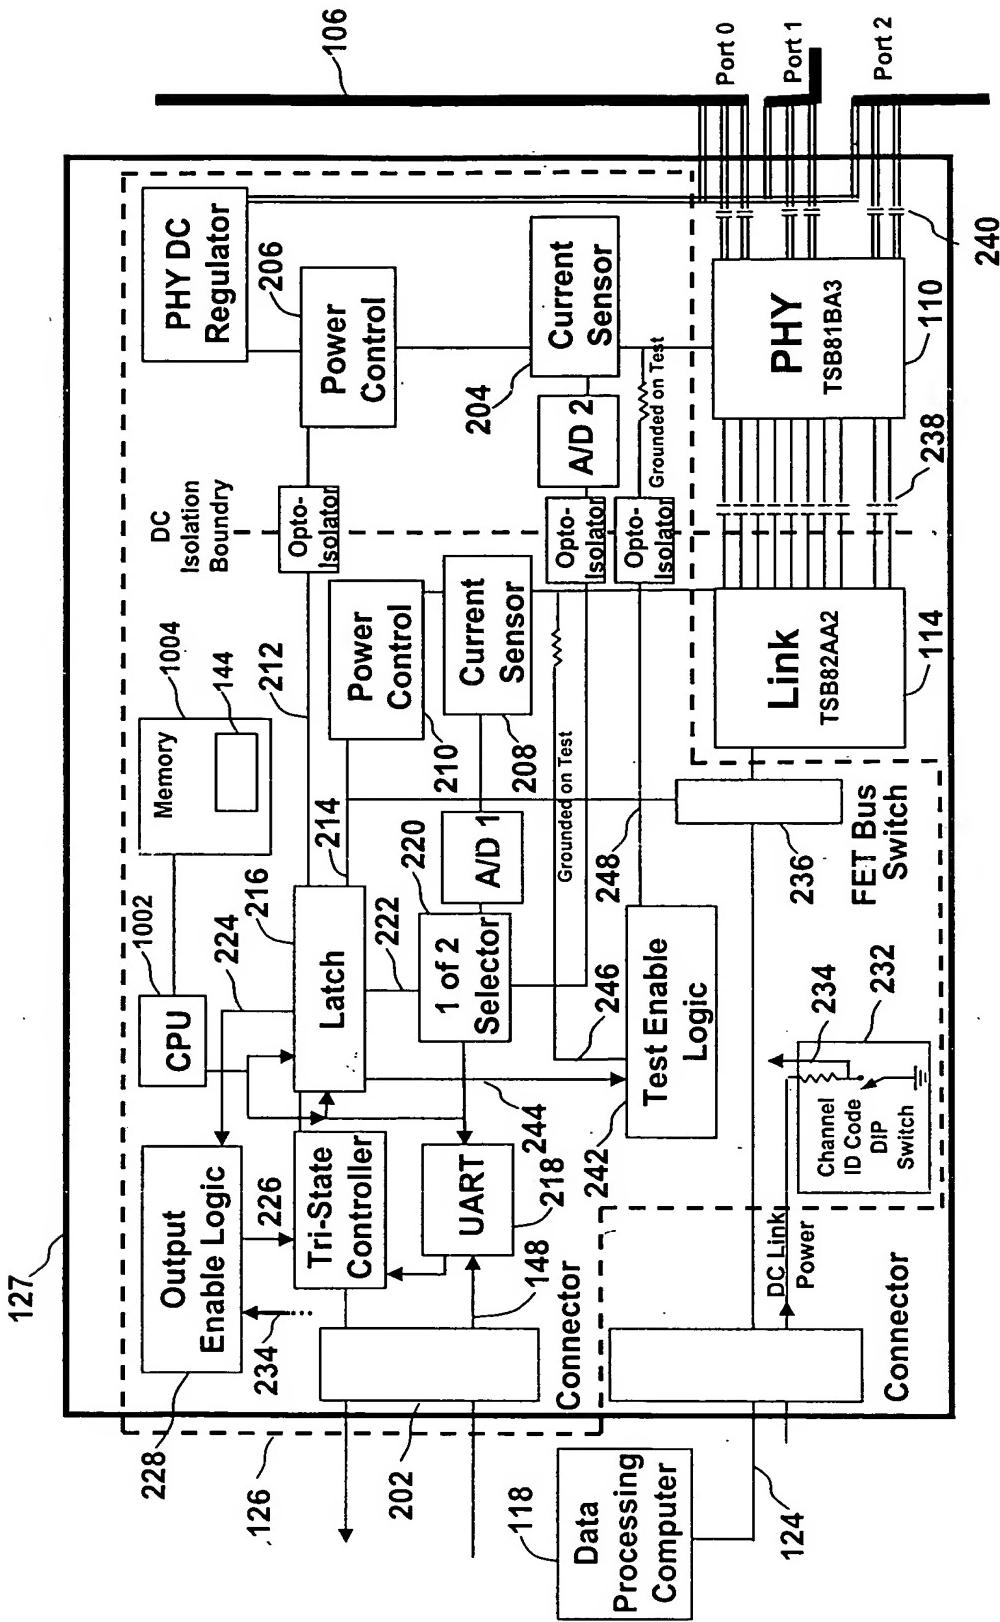
FIG. 10

FIG. 11